

Seats

n Adjusting seat position



- 1 Moves seat forward
- 2 Moves seat back

n Adjusting seatback angle



- 1 Incline
- 2 Recline

n Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire cushion

n Adjusting firmness



The lumbar support can be adjusted.

- 1** Firmer
- 2** Softer

n Inclining front seat



- 1** Incline

Seat Position Memory System

With the push and hold of a button, you can adjust the seat to a set customized position. The steering column and outside rear view mirrors are adjusted along with the driver's seat. Positions can be conveniently recorded for drivers and frequent passengers.

n Setting positions



- 1 Push the "SET" button.
- 2 Within 3 seconds after the "SET" button is pushed, push button "1" or "2" until the signal beeps.
This operation is also available while pushing and holding the "SET" button.

n Recalling positions



Push and hold one of the memory buttons (1 or 2) for more than 1 second.

Front Head Restraints

n Height adjustment



- 1 To raise: pull upward
- 2 To lower: depress the button and push down

n Angle adjustment



Move forward and backward.

Seat Belts

n Seat belt guides



To use the seat belt guide, detach the hook, let the seat belt run under the guide and then reattach the hook.

n Rear seat belt holders



Hold the rear seat belt with the holder when not in use.

Outside Rear View Mirrors

n Adjustment



1 Use the master switch to select which mirror to adjust (L or R).

2 Adjust the angle using the control switch.

Auto tilt:

Move the master switch to "L" or "R", Mirrors automatically tilt down when shifting into reverse. To deactivate tilt down position.

n Folding rear view mirror



1 Push inward

Anti-glare Inside Rear View Mirror

The auto-dimming function reduces glare from the headlights of vehicles behind you.

n Setting AUTO mode




Push the AUTO button.

The indicator light comes on when AUTO mode is selected.


Steering Column

n Raising and lowering

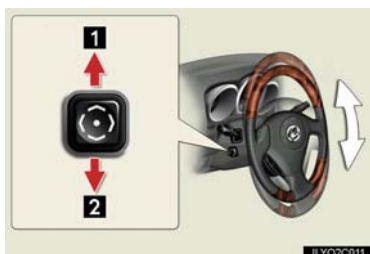

- 1 Up
- 2 Down

n Adjusting forward/back

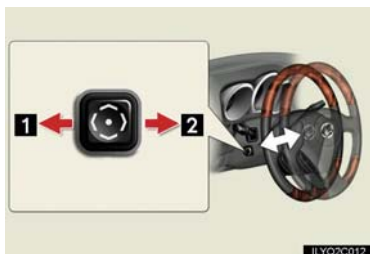

- 1 Away from the driver
- 2 Toward the driver

When the key is removed, the steering column moves to provide easy exit and entry. When the key is inserted, the steering column returns to its previously set position.